
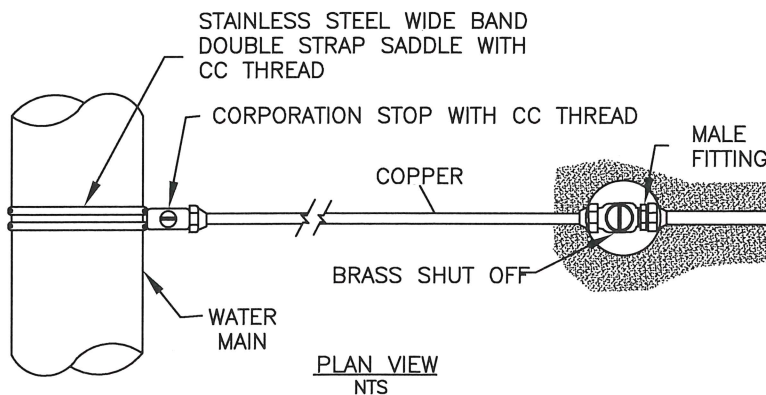
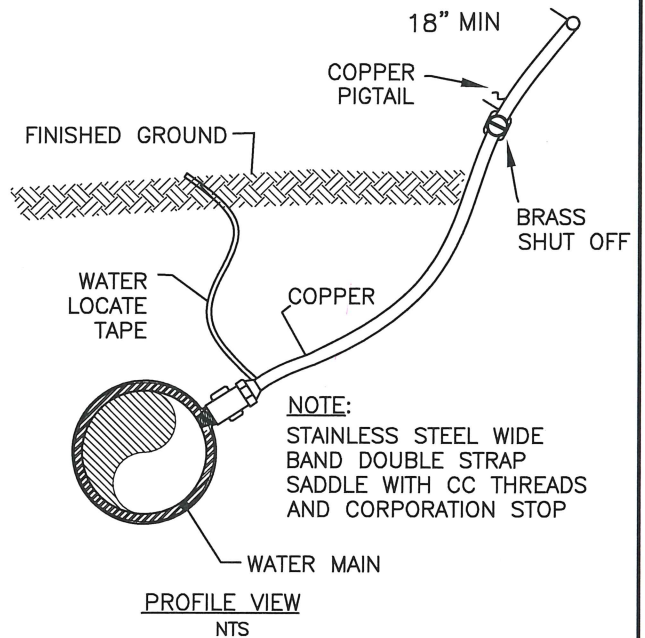



## AFTER SAMPLING PROCEDURE, DISCONTINUE SERVICE AS FOLLOWS:

1. SHUT OFF CORPORATION STOP
2. REMOVE COPPER PIPE AND SHUTOFF
3. ATTACH LOCATE TAPE TO CORPORATION STOP
4. CAP CORPORATION STOP
5. BACKFILL WITH LOCATE TAPE TRAILING UP

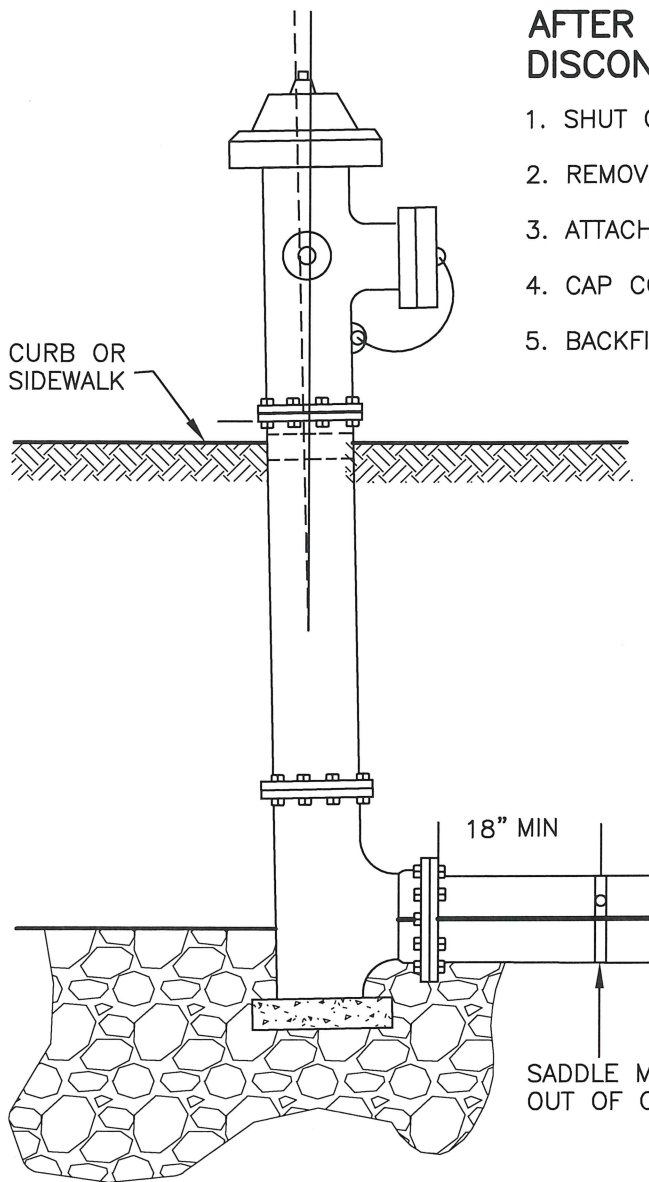

APPROVED

  
City Engineer

11 AUG 2016  
Date

CITY OF BELLINGHAM  
SAMPLE TAP INSTALLATION

DRAWING  
WA-803