
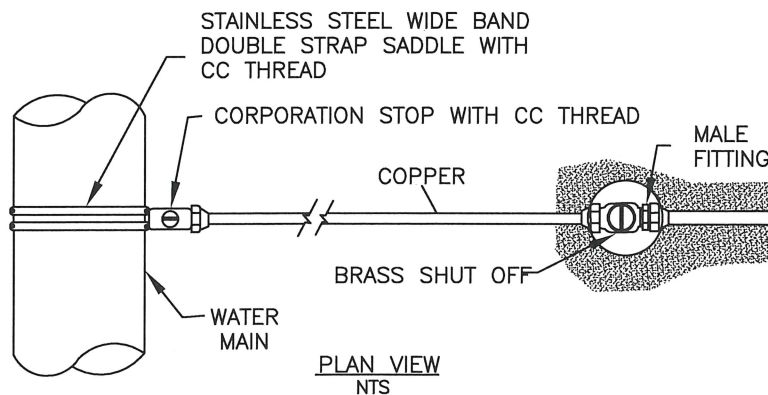
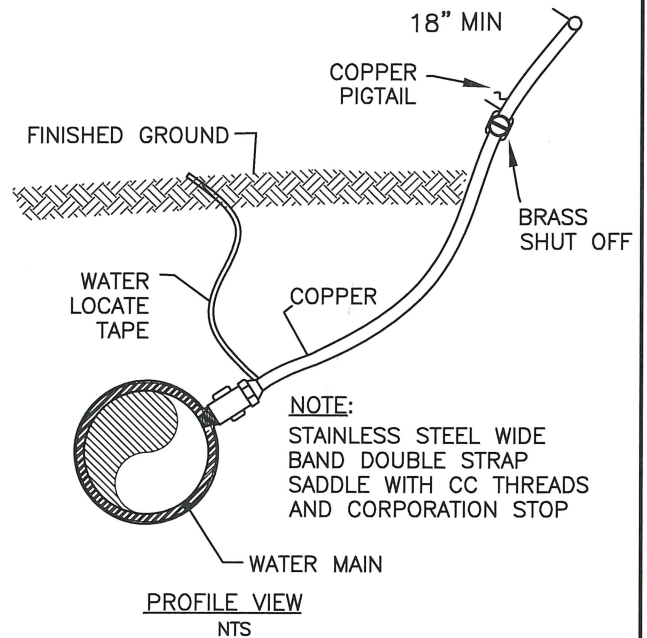


AFTER SAMPLING PROCEDURE, DISCONTINUE SERVICE AS FOLLOWS:

1. SHUT OFF CORPORATION STOP
2. REMOVE COPPER PIPE AND SHUTOFF
3. ATTACH LOCATE TAPE TO CORPORATION STOP
4. CAP CORPORATION STOP
5. BACKFILL WITH LOCATE TAPE TRAILING UP

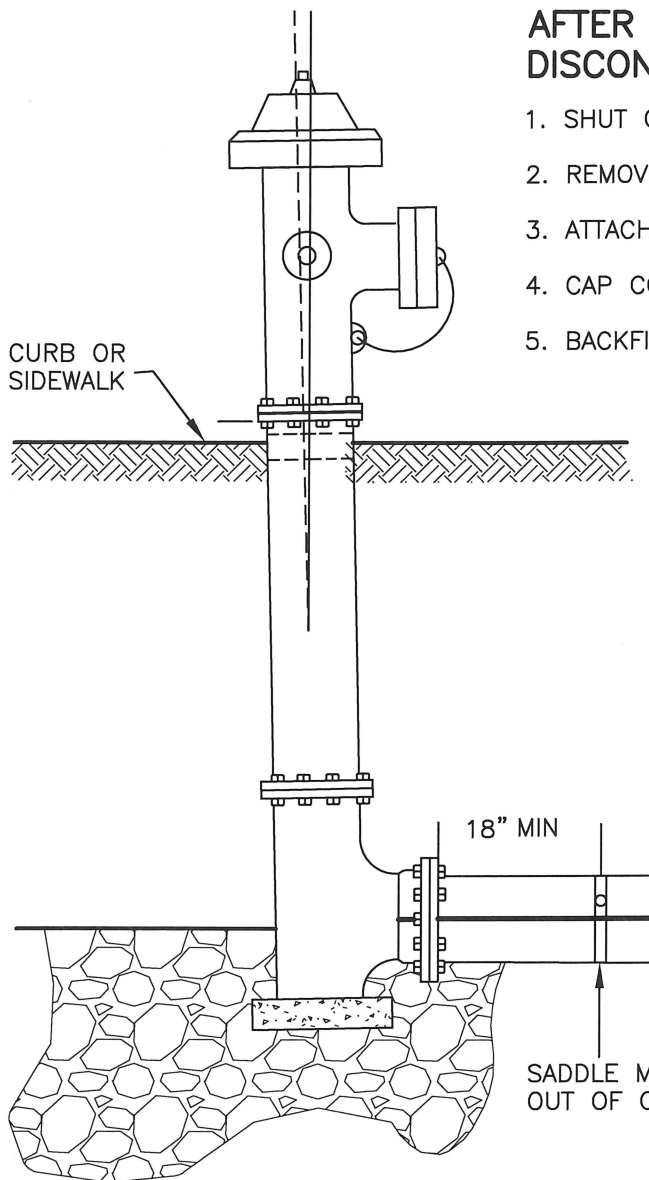

APPROVED


City Engineer

11 AUG 2016

Date

CITY OF BELLINGHAM
SAMPLE TAP INSTALLATION

DRAWING
WA-803