
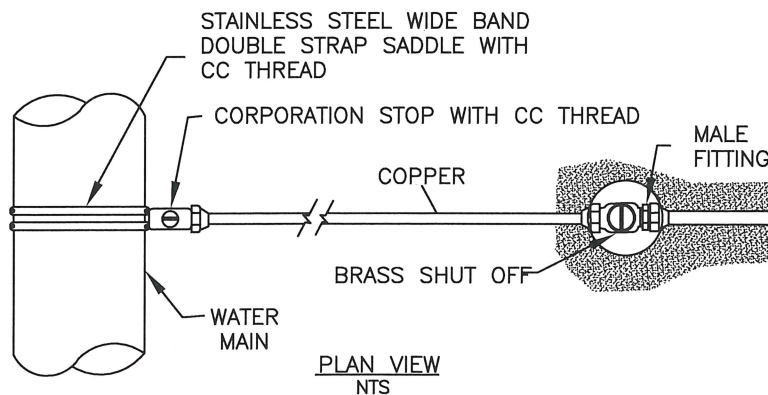
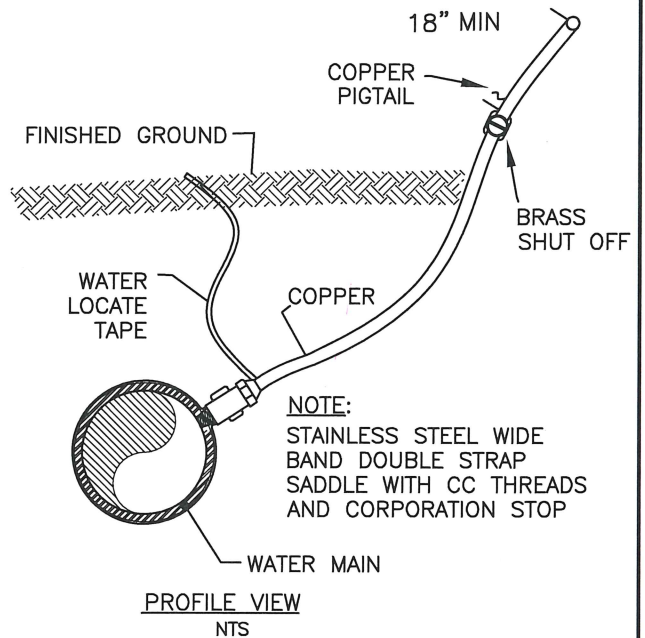


AFTER SAMPLING PROCEDURE, DISCONTINUE SERVICE AS FOLLOWS:

1. SHUT OFF CORPORATION STOP
2. REMOVE COPPER PIPE AND SHUTOFF
3. ATTACH LOCATE TAPE TO CORPORATION STOP
4. CAP CORPORATION STOP
5. BACKFILL WITH LOCATE TAPE TRAILING UP

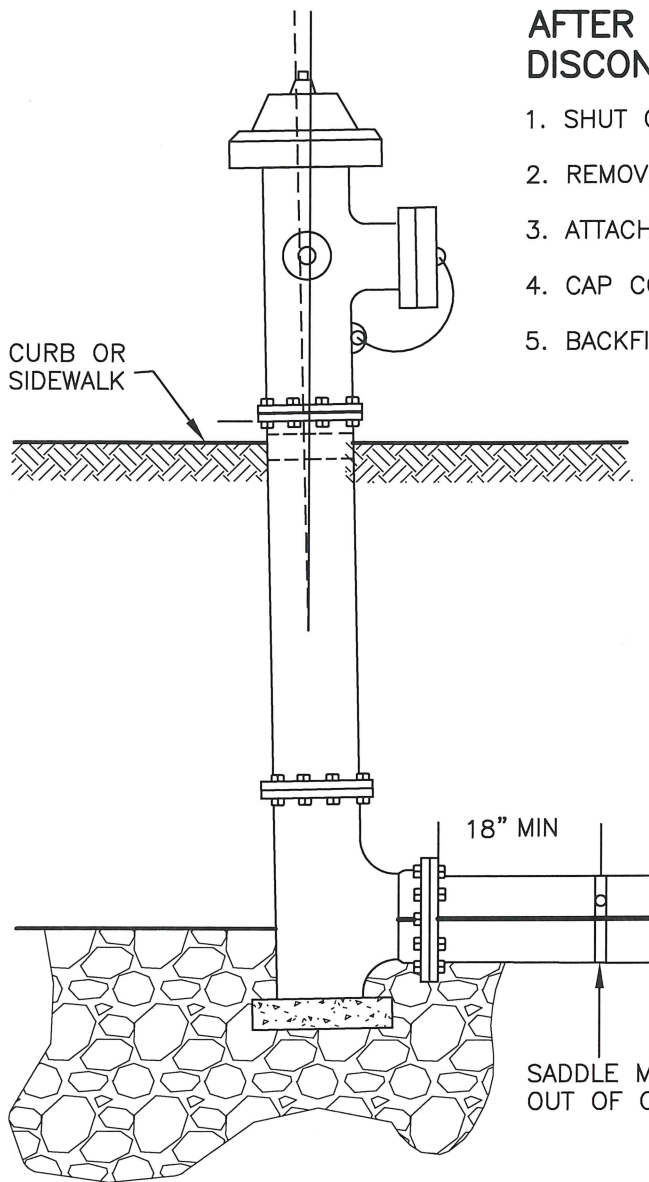

APPROVED

[Signature]
City Engineer

11 AUG 2016
Date

CITY OF BELLINGHAM
SAMPLE TAP INSTALLATION

DRAWING
WA-803